



A 90402 1928-29 Coupe

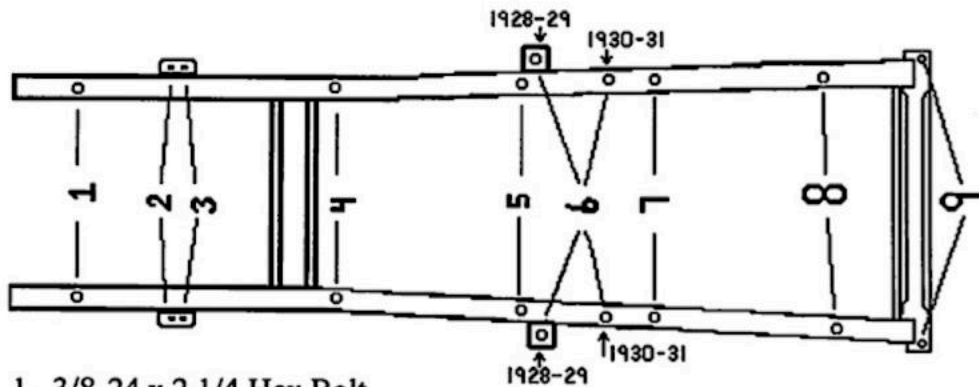


1. 3/8-24 x 2 1/4 Hex Bolt
2. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt
5. 7/16-20 x 2 1/4 Hex Bolt
6. none
7. none
8. none
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90404 1928-29 Fordor & Town Sedan

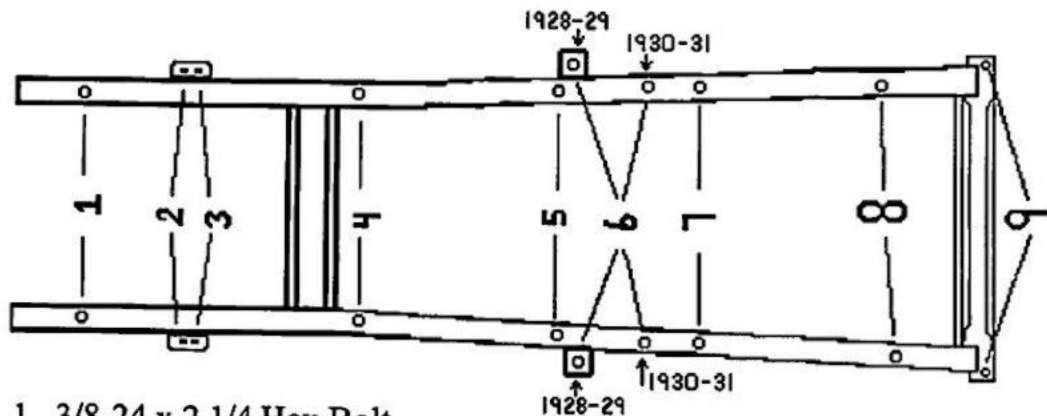


1. 3/8-24 x 2 1/4 Hex Bolt
2. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
5. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
6. none
7. none
8. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90412 1928-29 Phaeton

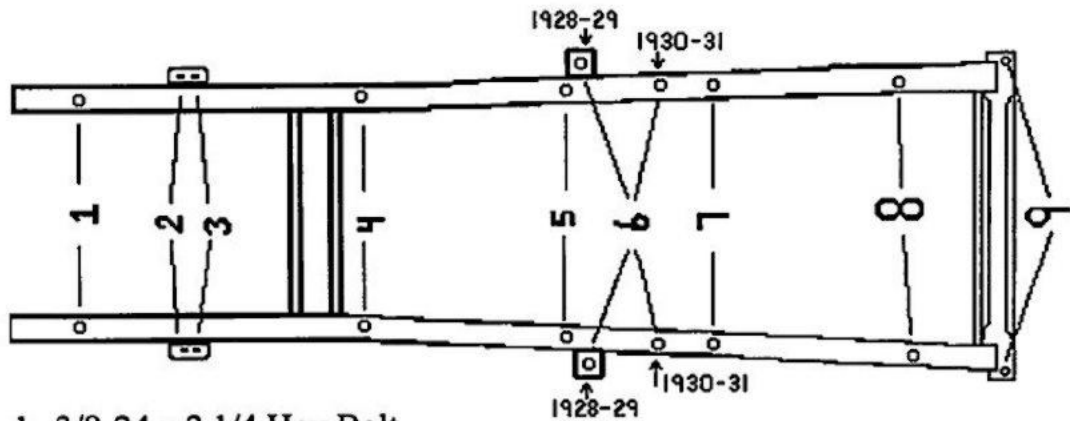


1. 3/8-24 x 2 1/4 Hex Bolt
2. 3/8-24 x 2 3/4 Carriage Bolt with Flat Washer
3. 3/8-24 x 2 3/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt
5. 7/16-20 x 2 1/4 Carriage Bolt
6. none
7. none
8. 7/16-20 x 2 1/4 Carriage Bolt
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90400 1928-29 Tudor

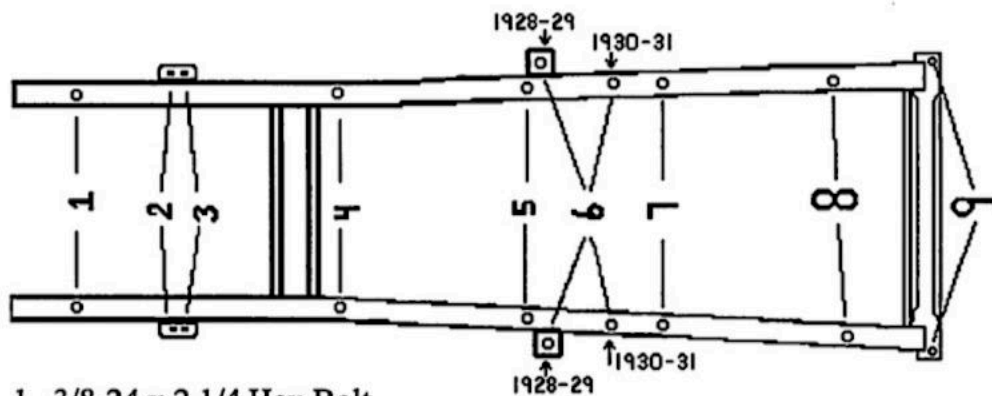


1. 3/8-24 x 2 1/4 Hex Bolt
2. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt
5. 7/16-20 x 2 1/4 Carriage Bolt
6. none
7. none
8. none
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90410-A 1928-31 Pick-Up Box

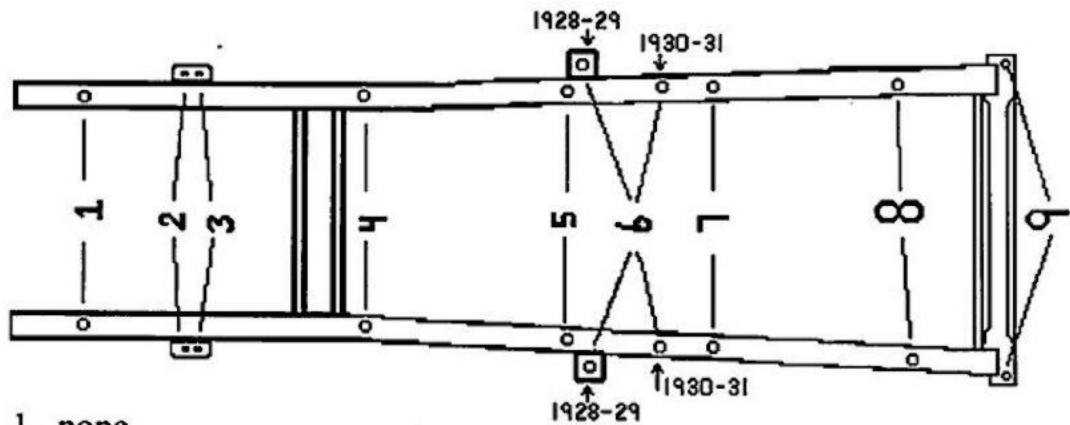


1. none
2. none
3. none
4. none
5. none
6. none
7. 7/16-20 x 3 Hex Bolt with Flat Washer
8. 7/16-20 x 3 Hex Bolt with Flat Washer
9. 7/16-20 x 3 Hex Bolt

A 90414 1928-29 Cabriolet 68-A

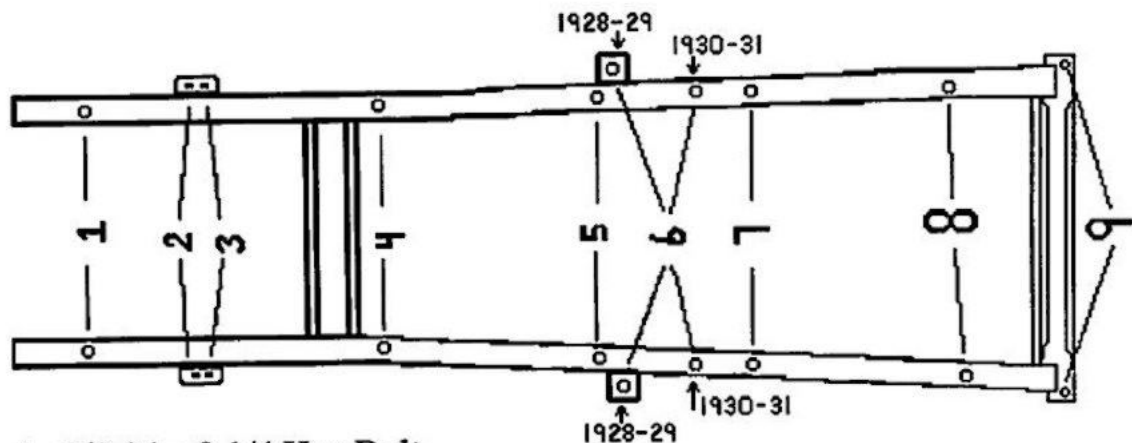


1. 3/8-24 x 2 1/4 Hex Bolt
2. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
5. 7/16-20 x 2 1/4 Hex Bolt
6. none
7. none
8. 7/16-20 x 2 1/4 Carriage Bolt
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90415 1930-31 Cabriolet 68-B

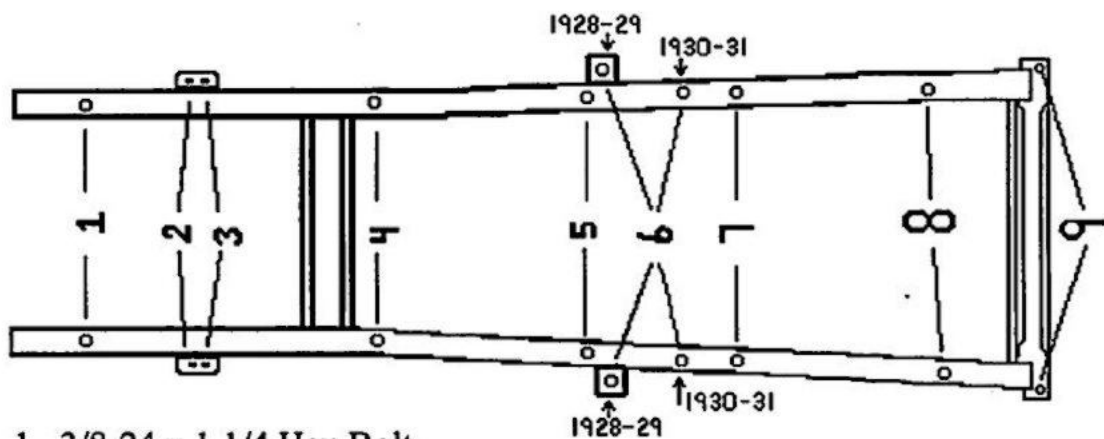


1. 3/8-24 x 1 1/4 Hex Bolt
2. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
5. 7/16-20 x 2 1/4 Hex Bolt
6. none
7. none
8. 7/16-20 x 3 1/4 Carriage Bolt
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90403 1930-31 Coupe

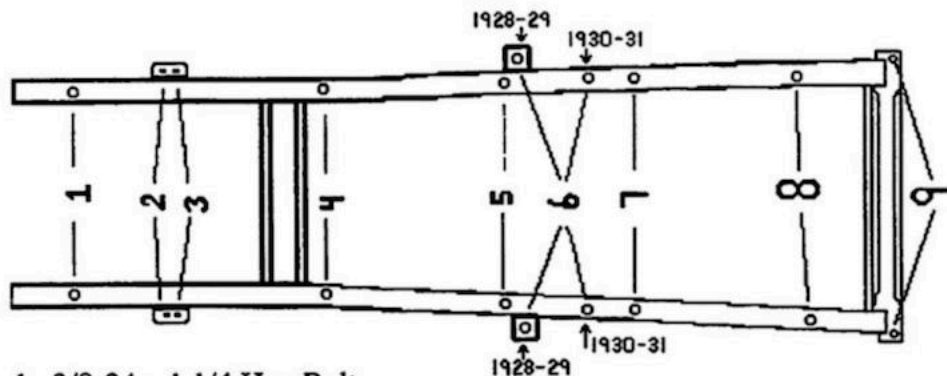


1. 3/8-24 x 1 1/4 Hex Bolt
2. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt
5. 7/16-20 x 2 1/4 Hex Bolt
6. none
7. none
8. none
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90405-A 1930-31 Deluxe Fordor & S/W Fordor

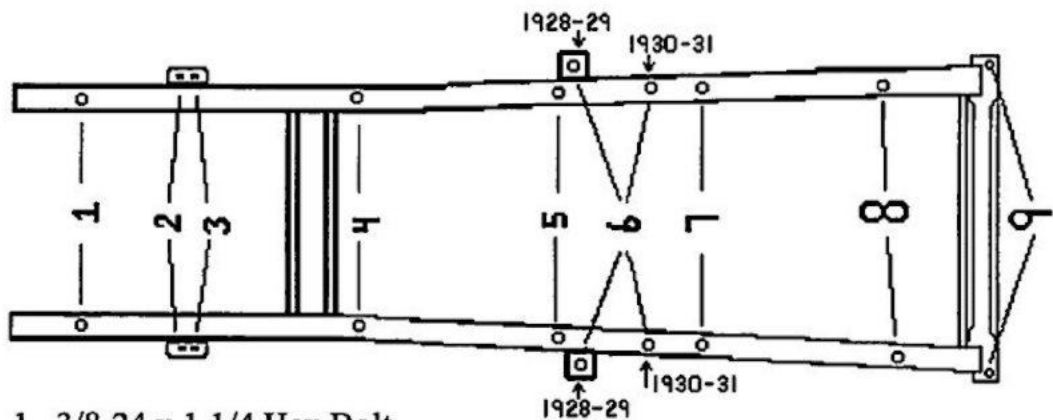


1. 3/8-24 x 1 1/4 Hex Bolt
2. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt
5. none
6. 7/16-20 x 2 1/4 Carriage Bolt
7. none
8. 7/16-20 x 3 Hex Bolt with Flat Washer
9. 7/16-20 x 3 Hex Bolt

A 90413 1930-31 Phaeton

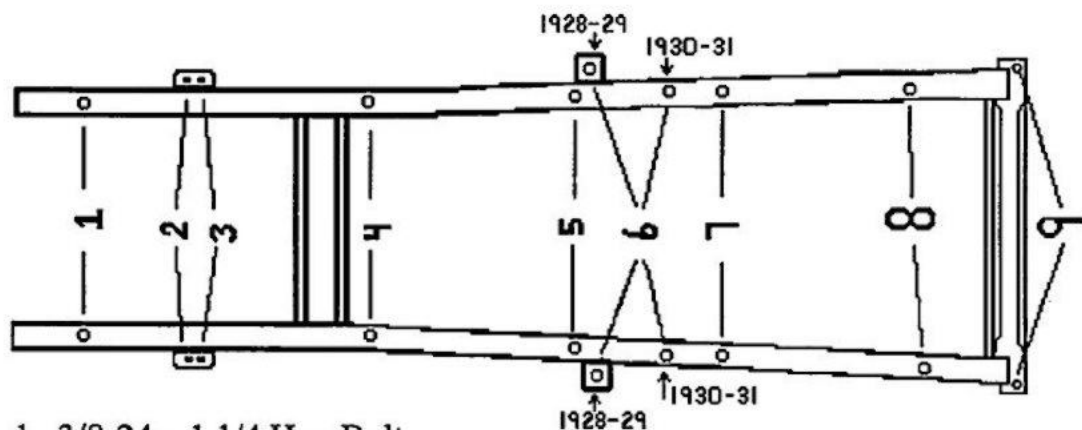


1. 3/8-24 x 1 1/4 Hex Bolt
2. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt
5. 7/16-20 x 2 1/4 Carriage Bolt
6. none
7. none
8. 7/16-20 x 2 1/4 Carriage Bolt
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90401 1930-31 Tudor

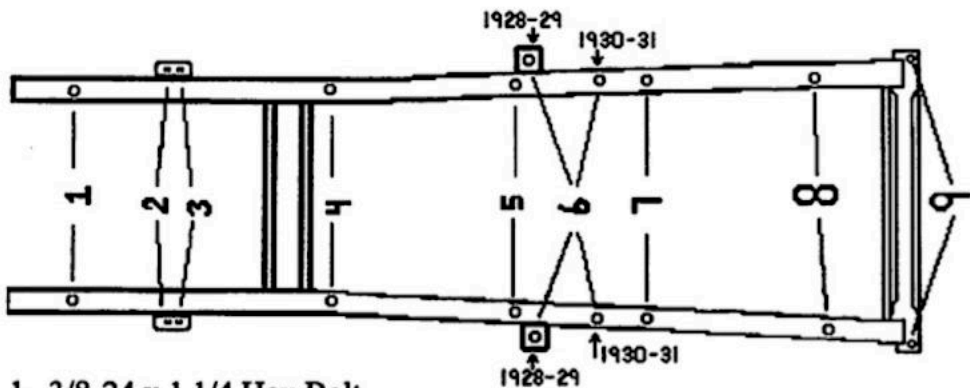


1. 3/8-24 x 1 1/4 Hex Bolt
2. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8-24 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt
5. 7/16-20 x 2 1/4 Carriage Bolt
6. none
7. none
8. none
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90411 1931 A-400

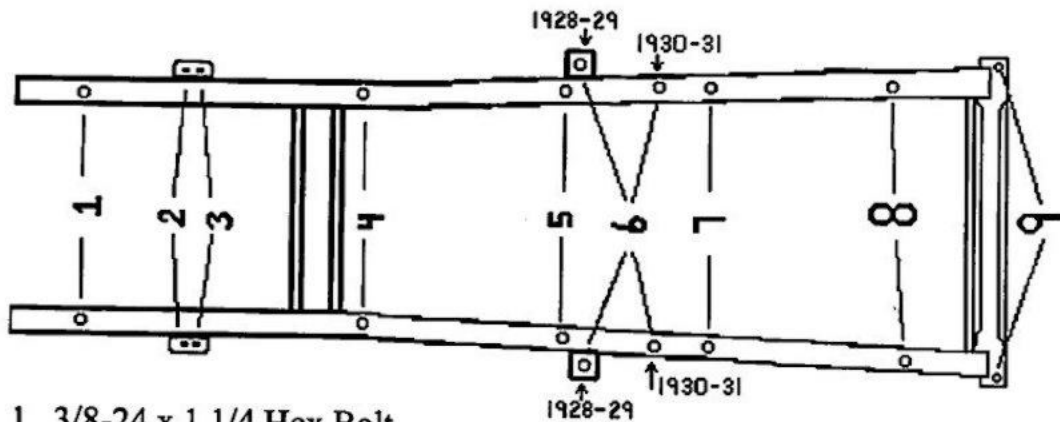

1. 3/8-24 x 1 1/4 Hex Bolt
2. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
5. none
6. none
7. none
8. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
9. 7/16-20 x 3 Hex Bolt with Flat Washer

A 90416 1931 Cabriolet 68-C

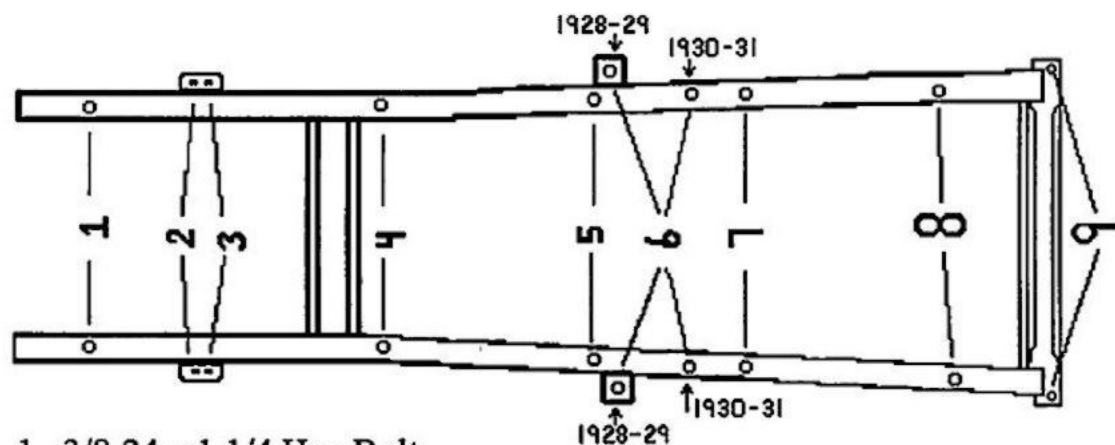

1. 3/8-24 x 1 1/4 Hex Bolt
2. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
3. 3/8 x 2 1/4 Carriage Bolt with Flat Washer
4. 7/16-20 x 2 1/4 Hex Bolt with Flat Washer
5. none
6. 7/16-20 x 3 Hex Bolt with Flat Washer
7. none
8. 7/16-20 x 3 Hex Bolt
9. 7/16-20 x 3 Hex Bolt with Flat Washer