


## 1930-31 Tudor Sedan Seat Belt Location

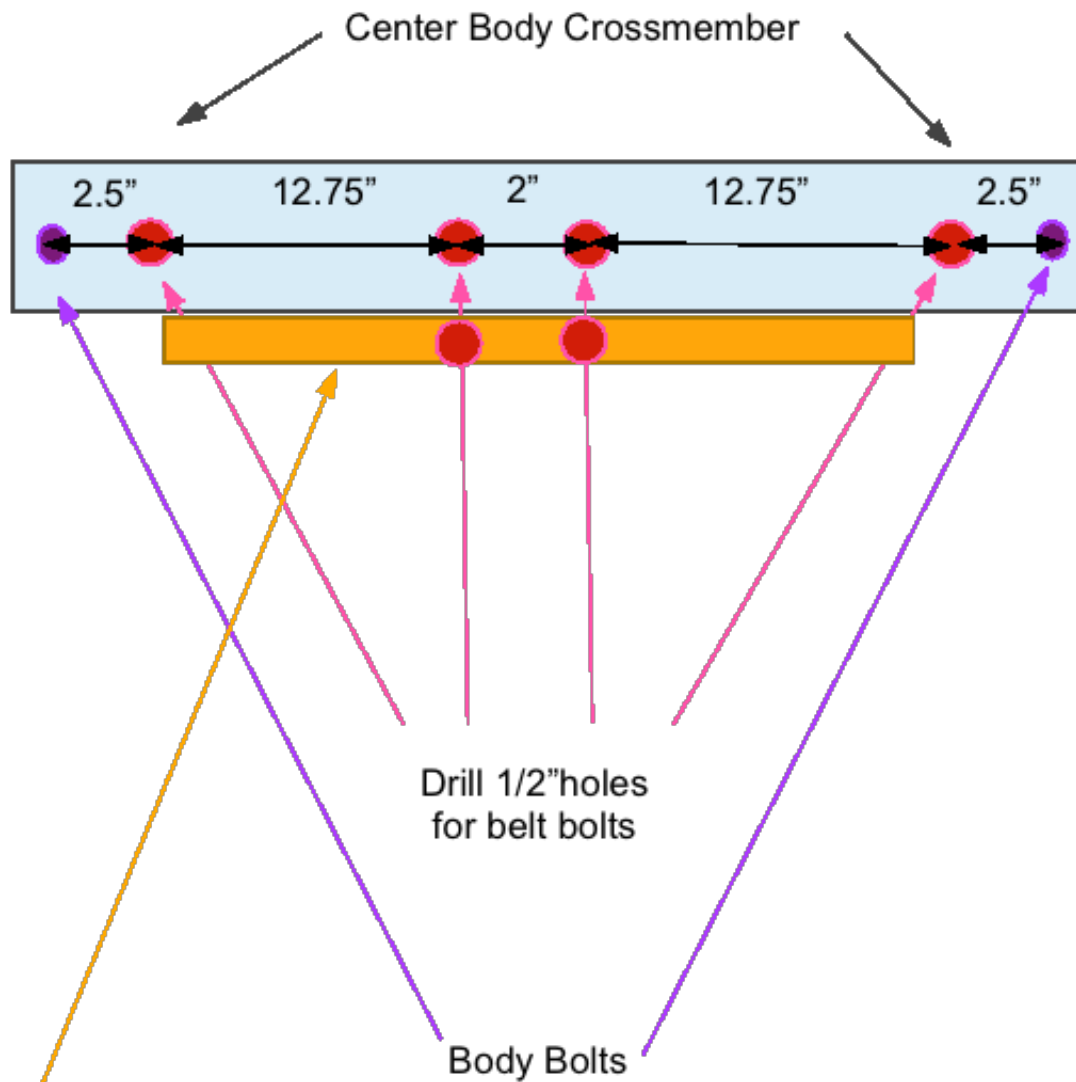

Hardwood support for under crossmember  
.75" thick, 26.75" long; 1.75" wide  
Two 1/2" holes 2" apart in center

Tape on floor where holes for 1/2" bolts will be located:



Closeup of tape on floor where bolts will be drilled







Wood strip that will go underneath the body crossmember to allow bolts to be tightened:







View from underneath the body crossmember showing bolts now in place. Drill holes in the oak strip to correspond to the bolt holes.

The oak strip will allow for washers and nuts to hold the belts in place:



Existing side body blocks are now partially drilled for the mounting bolts:









